

# INSTALL INSTRUCTIONS

## JEEP ROCK SLIDERS

(120009-2-K)

### KIT CONTENTS

**1 ct.**

Driver's Side Rock Slider



**1 ct.**

Passenger's Side Rock Slider



**10 ct.**

3/8"-16x1.25 Bolts



**10 ct.**

3/8" Flat Washer



**10 ct.**

3/8"-16 Top Lock Nut



### RECOMMENDED TOOLS

Hammer

Center Punch

3/8 Ratchet

Metric Socket Set

T45 Torx Socket

9/16 Wrench

Drill

3/16 & 3/8 Drill Bits


Hack Saw, Cutoff Wheel,  
or Body Saw

Torque Wrench

Floor Jack

Wood Blocks

### BODY MOUNT POSITIONS

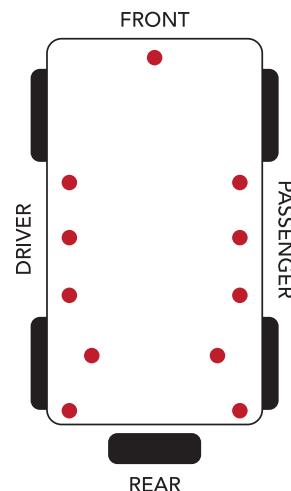

# INSTALL INSTRUCTIONS (CONT'D.)

## CAUTION

1. Read all instructions completely and carefully before you begin.
2. Check to make sure the kit is complete and that no parts are missing(refer to the Kit Contents List on the first page of these instructions). If anything is missing, please contact Trail-Gear at 559.252.4950.
3. Park vehicle on a clean, dry, flat, level surface and block the tires so the vehicle can not roll in either direction.



5356 PINE AVE • FRESNO, CA • 93727  
USA TOLL FREE: 877.4X4.TOYS • WORLDWIDE: 559.252.4950

# INSTALL INSTRUCTIONS (CONT'D.)

## STEP 1

Remove drivers side front body flare by removing (3) 8mm head screws.



## STEP 2

Remove drivers side step by removing (6) bolts (if applicable).



## STEP 3

Loosen all drivers side body mounts (5) and one in the front center (6 total). Remove 2 mounts that are under the door. These are the body mounts that the rock slider will mount to.



## STEP 4

Using a floor jack and wood blocks, raise the body of the Jeep high enough to remove the 2 body mounts under the door.





# INSTALL INSTRUCTIONS (CONT'D.)

## STEP 5

Mark the 2 (per side) rubber body mount at  $\frac{3}{16}$ " from the top as shown. Remove steel sleeve and cut rubber mount only. Re install metal sleeve.



## STEP 6

Install modified body mounts (2) and rock slider and lower body of Jeep as shown. (Rock slider goes in between rubber mount and top washer of the sleeve)



## STEP 7

Tighten (5) body mounts. Torque to 80 ft/lbs. Leave the front mount loose to complete passenger side.



## STEP 8

Place floor jack and blocks under edge of rock slider and raise until top edge of slider is tight against the vehicle body and center punch each hole.



## STEP 9

Check that all wires and carpet are clear then drill (5)  $\frac{3}{8}$ " holes. A  $\frac{3}{16}$ " pilot hole may be required.





# INSTALL INSTRUCTIONS (CONT'D.)

## STEP 10

Install (5) Torx head screws, washers and nuts.  
Torque to 30 ft/lbs.



## STEP 11

Repeat steps 1-10 for passenger side.

## STEP 12

Tighten front center body mount.

## INSTALLED PRODUCT

